

Trumix™ 100 Installation Instructions

1. Mount panel on wall:
 - a. In a well ventilated, accessible, indoor area.
 - b. Out of harm's way.
2. Hook up panel:
 - a. Using thread sealant on threads.
 - b. Using back-up wrench on panel fittings.
 - c. Do not use fittings with Check Valves on inlets.
 - d. Do not remove 1/4" female threaded fittings from panel, as they contain filters.
3. Leak test all fittings.
4. Use regulators and tubing suitable for 70-150 psi.
Notes: 50 psi regulators are OK on a 50 psi blender.
N₂ and CO₂ pressures do not need to match!
5. Cylinders should be stored in a well ventilated, accessible area.
6. Secure all cylinders to wall.




1. Use thread sealant.
2. Do not remove fittings.
3. Use back-up wrenches.

Use reinforced tubing suitable for 70-150 psi.

Use regulators designed for outlet pressure of 70-150 psi. 50 psi regulators are OK on a 50 psi blender.

Mixed Gas Out

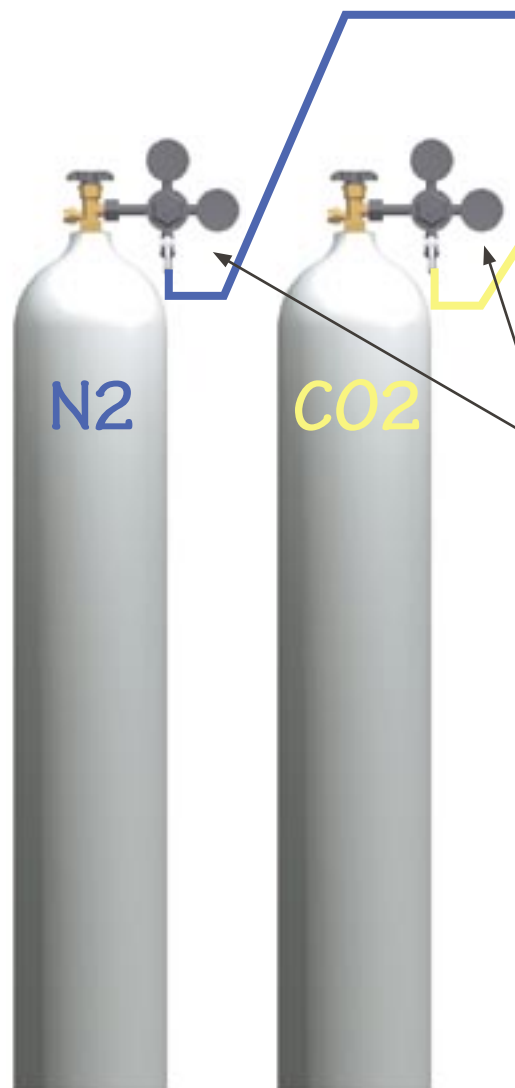

Warning
With this and any compressed gas system there are certain dangers. If you do not have the experience to understand these dangers use a professional installer.