


## Trumix™ 200 Installation Instructions

1. Mount panel on wall:
  - a. In a well ventilated, accessible, indoor area.
  - b. Out of harm's way.
2. Hook up panel:
  - a. Using thread sealant on threads.
  - b. Using back-up wrench on panel fittings.
  - c. Do not use fittings with Check Valves on inlets.
  - d. Do not remove 1/4" female threaded fittings from panel, as they contain filters.
3. Leak test all fittings.
4. Use regulators and tubing suitable for 70-150 psi.  
Notes: 50 psi regulators are OK on a 50 psi blender.  
*N<sub>2</sub> and CO<sub>2</sub> pressures do not need to match!*
5. Cylinders should be stored in a well ventilated, accessible area.
6. Secure all cylinders to wall.



1. Use thread sealant.
2. Do not remove fittings.
3. Use back-up wrenches.

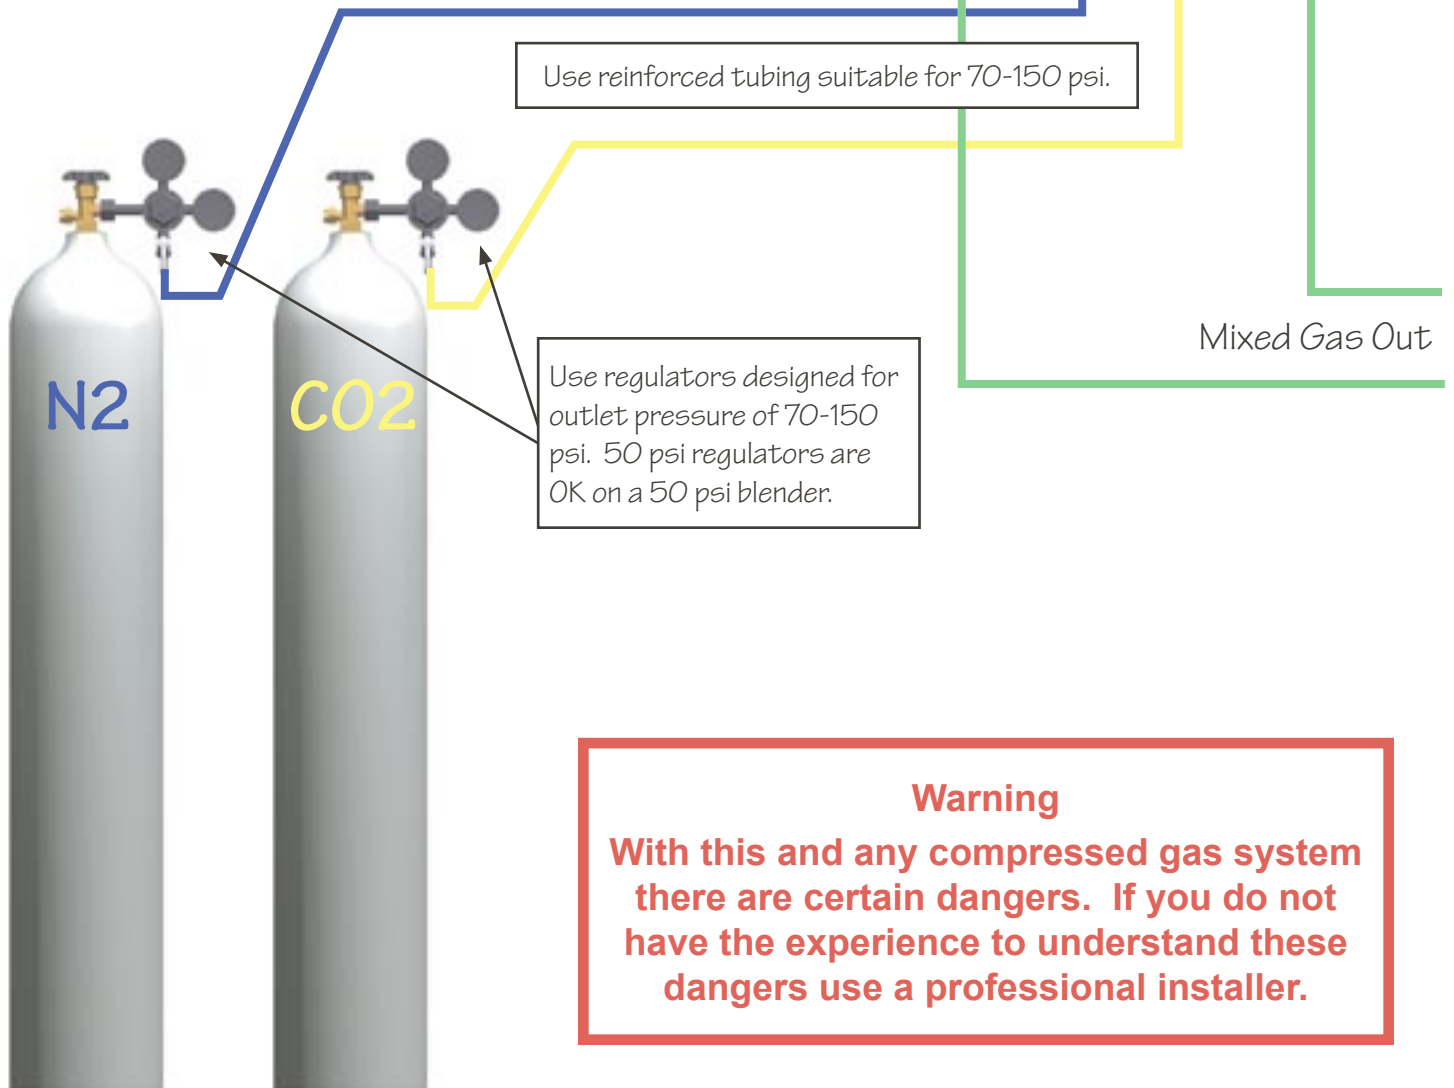

**Warning**  
With this and any compressed gas system there are certain dangers. If you do not have the experience to understand these dangers use a professional installer.